

These instructions are for remote number **SRC-300** used with the Nextlevel box.

Your remote control needs to be programmed to operate properly. It needs to be told how to run your television, which 'stream' it should change the channels for, and which gateway (yours—not your neighbors) it is supposed to control.

1. Does the remote turn on/off the TV and control volume?
If YES, proceed to the next question.

If NO, program remote using this procedure:

- a. Manually turn on TV.
- b. Press and Hold the LED button until light flashes.
- c. Press the RECORD button (red dot). Light will stay solid.
- d. Press the POWER button (light will stay solid).
- e. Press and release Up Arrow repeatedly. Each time you press the Up Arrow, a new code is tried. When the TV turns off, the correct code has been found. Then press Select to save code.

Note: Don't press the Up Arrow too fast or you will save the wrong code.

2. Can you change channel or see the guide?
If YES proceed to next question.

If NO, the remote needs to be programmed to control the correct stream.

- a. Press and hold the LED button until light flashes.
- b. Press the RECORD button (red dot). Light will stay solid.
- c. Press the A button.
- a. Enter number for the stream:
 - 0 for infrared Stream 1 (Only use if the remote will always be used in the same room as the box.)
 - 1 for UHF Stream 1 (Channel 4)
 - 2 for UHF Stream 2 (Channel 7)
 - 3 for UHF Stream 3 (Channel13)

3. If you still can't change channels or see the guide, the remote must be programmed to the correct black box.
 1. Press and hold the LED button until light flashes.
 2. Press the RECORD button (red dot). Light will stay solid.
 3. Press the B button and enter the 3 digit Gateway ID code (1+ last two digits of phone number).

Note: After each programming function, the LED will flash 3 times for confirmation.

4. If you are still having problems with your remote, please contact ITC at 1-800-417-8667.