

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

Setup

Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, REW, Play, FFWD, Stop, Pause, Record

In STB mode, these control the DVR functions. In other modes, these control a VCR, DVD Player or PVR.

Menu

Displays the menu.

Guide

Opens the Interactive Program Guide.

Day +/-

Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on your set-top box.

Vol +/-

Raise or lower the volume.

Mute

Turn the sound off or on.

Aspect Ratio*

Temporarily change the conversion mode to Original Size or Fit to Screen.

Input

In TV control mode, will change the input of the device you are controlling.



Power

Turn on/off a selected device.

Live

Return to watching live TV.

List

Display a list of recorded, future and series rules on your DVR.

Info

Display the current channel and program information. Press again for more detail.

Browse, Search, Arrows, OK

Navigate and select on-screen choices.

Exit

Exit the current screen.

Page +/-

Page up or down in lists and Interactive Program Guide.

Channel +/-

Changes to the next higher or lower channel.

On Demand

Access video on demand services.

Last

Recall the last channel you were watching.

FAV

View your favorite channels.

Number Keys (0-9)

Directly select a channel or enter options.

Button

Use to turn closed captioning on and off.

*If Available