

Controlling The Remote

TV, Set-Top-Box

Use one remote to control multiple devices.

Menu

Displays the menu.

Arrow Keys and OK/Sel

Navigate and select onscreen choices.

Guide

Opens the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on set-top box.

Volume Up and Down

Raise or lower the volume.

On Demand

Access video on demand services.

Mute

Turn the sound off or on.

Aspect Ratio

Temporarily change the conversion mode from Original Size to Fit Screen.

ALL

TV

OFF

STB

MENU

INFO

←

OK/SEL

→

GUIDE

↓

EXIT

▲

■

●

◆

⤴

PAGE+

⤵

VOL

PAGE-

CH

⤵

ON Demand

⤴

MUTE

FAV

LAST

1

2

3

4

5

6

7

8

9

*

0

INPUT

Off

Turn on/off a selected device.

Info

Display current channel and Program information.
Press again for more detail.

Exit

Exit the current screen.

Page +/-

Page up or down in lists and Interactive Program Guide.

Channel Up and Down

Changes to the next higher or lower channel.

Last

Recall the last channel you were watching.

Fav

View your favorite channels.

Number Keys (0-9)

Directly select a channel or enter options.

Input

In TV control mode, will change the input of the device you are controlling.

UR2-211IS